## Step 3 Grab your remote

The TV remote should feel right at home in your hand. We designed it to be incredibly intuitive for watching TV and navigating on-screen menus.

- ∃ INPUT To select input source and display the quick panel
- **REMOTE MICROPHONE** Talk to the remote microphone after pressing the Google Assistant button
- OPOWER Turn TV on and off
- **PROFILE SELECTOR** Switch profile
- **GOOGLE ASSISTANT BUTTON** Press to activate the remote's Google Assistant microphone. Search content through your voice by holding down the button.
- SETTINGS To display the dashboard menu
- CIRCULAR D-PAD Navigation direction buttons (Up/Down/Left/Right)
  - OK **OK BUTTON** To confirm an entry or selection
  - ← BACK Return to previous screen
  - TCL HOME To access the TV homepage
  - Ճ LIVE GUIDE Open live TV EPG
- VOL +/- VOLUME Raise and lower volume
- CH ∧/∨ CHANNEL To change channels
  - **QUICK SETTINGS** Open the quick menu
  - **MUTE** Press the button to mute the sound
  - TV PLUS Access to network Live Channel
  - 123 VIRTUAL KEYBOARD Open virtual keyboard on screen
  - INFORMATION In TV source, press to view the program information

## How to turn on/off the backlight of the remote?

The backlight of the remote will be turned on automatically when it is taken up. If you want to turn off the backlight, press and hold the SETTINGS button and the BACK button at the same time for 3 seconds. If you want to turn on the backlight again, press and hold the SETTINGS button and the BACK button at the same time for 3 seconds.



**Tip!** Follow the on-screen guide to pair the remote control with the TV when pressing the button for the first time.